

# FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

## BRAKE & CLUTCH LEVER GUARDS - REPLACEMENT PART



PART NUMBERS INCLUDED ON THIS SHEET:

BLG-A140 / CLG-A140

### **BRAKE LEVER GUARD, A140 MOULDED REPLACEMENT PART ONLY** **PART NO. BLG-A140**

**This is to be used with the GBRacing bar end and insert**

- 1 Remove existing bar end and replace with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.



### **CLUTCH LEVER GUARD, A140 MOULDED REPLACEMENT PART ONLY** **PART NO. CLG-A140**

**This is to be used with the GBRacing bar end and insert**

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

