

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

BRAKE & CLUTCH LEVER GUARDS - REPLACEMENT PART



PART NUMBERS INCLUDED ON THIS SHEET:

BLG-A160 / CLG-A160

BRAKE LEVER GUARD, A160 MOULDED REPLACEMENT PART ONLY PART NO. BLG-A160

This is to be used with the GBRacing bar end and insert

- 1 Remove existing bar end and replace with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.



CLUTCH LEVER GUARD, A160 MOULDED REPLACEMENT PART ONLY PART NO. CLG-A160

This is to be used with the GBRacing bar end and insert

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

