



**SuperSport 937  
2016-2020  
CABLE CLUTCH VERSION**

**FITTING INSTRUCTIONS**  
TO BE FITTED BY A QUALIFIED TECHNICIAN



**THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:**

Secondary Alternator Cover Part No. EC-937-2016-1-GBR / Secondary Clutch Cover Part No. EC-937-2016-2-GBR

Secondary Oil Inspection Cover Part No. EC-1937-2016-4-GBR / Secondary Water Pump Cover Part No. EC-937-2016-5-GBR


**SECONDARY ALTERNATOR COVER – PART NO. EC-937-2016-1-GBR**

Please note - See **Fig.2:** Before fitment, please make sure you have a marker pen to mark spline for alignment. The bracket in Fig. 2 must not be removed to fit GBRacing covers.



- 1 Remove fairing.
- 2 Remove bolt 1 on the gear linkage arm (**Fig. 2**).  
Before you remove the upper bolt 2, put a mark on the spline at the bottom of the slot (as shown). Then remove the upper bolt 2 and slide off the gear linkage arm.
- 3 Remove 4 existing bolts from the stock alternator cover, shown in **Fig. 1** as position Bolt 1, 2, 3 & 4.
- 4 Place the secondary alternator cover over the stock cover.
- 5 Assemble 4 replacement bolts loosely in the correct position as shown in **Fig. 1**.
- 6 Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN.
- 7 Put the gear linkage arm back on the spline, ensuring the slot lines up with the mark you made earlier (**Fig. 2**).
- 8 Re-fit the push rod through the bottom of the arm as in **Fig. 2** then reinstall bolt 1.
- 9 Re-fit Fairing.



**Fig. 2: GEAR LINKAGE ARM**

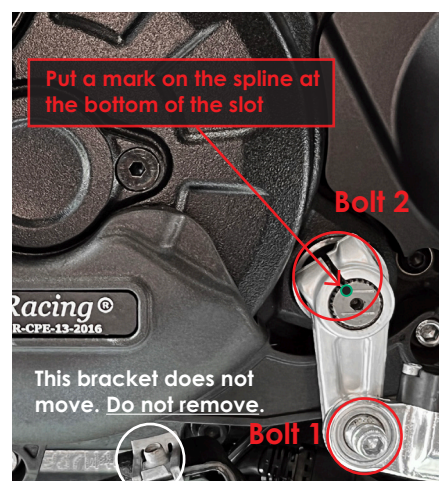



**Fig. 1**

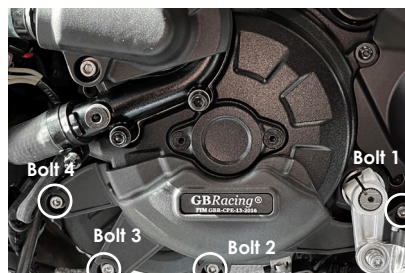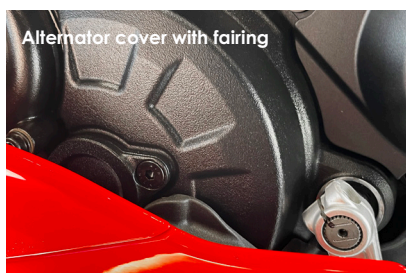

**SECONDARY CLUTCH COVER – PART NO. EC-937-2016-2-GBR**

**THIS IS FOR CABLE CLUTCH VERSION ONLY**

- 1 Remove fairing.
- 2 Remove 4 existing bolts from the clutch cover, shown as position Bolt 1, 2, 3 & 4.
- 3 Place the secondary clutch cover over the stock cover.
- 4 Assemble 4 replacement bolts loosely in the correct position as shown.
- 5 Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN.
- 6 Re-fit fairing.

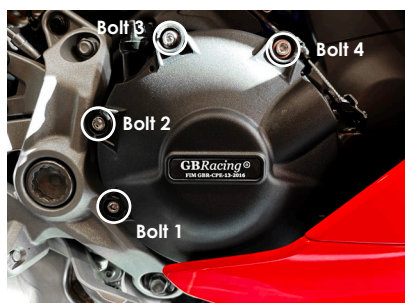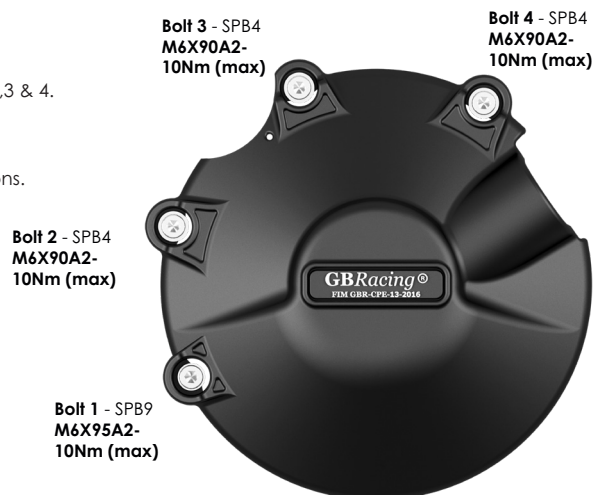





**SuperSport 937**  
**2016-2020**  
**CABLE CLUTCH VERSION**

**FITTING INSTRUCTIONS**  
TO BE FITTED BY A QUALIFIED TECHNICIAN





**SECONDARY OIL INSPECTION COVER – PART NO. EC-937-2016-4-GBR**

- 1 Remove fairing.
- 2 Remove 3 existing bolts from the oil inspection cover, shown as position Bolt 1, 2 & 3.
- 3 Place the secondary oil inspection cover over the stock cover.
- 4 Assemble 3 replacement bolts loosely in the correct position as shown.
- 5 Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations.  
DO NOT OVERTIGHTEN.
- 6 Re-fit fairing.

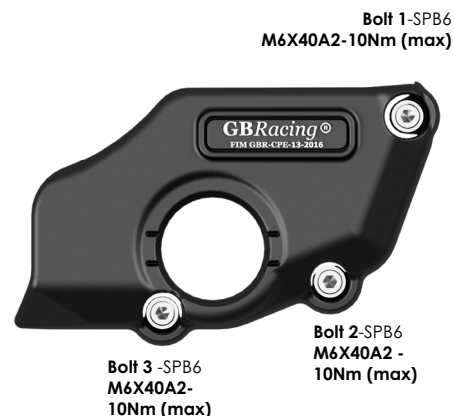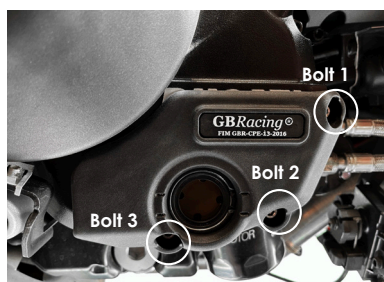

**SECONDARY WATER PUMP COVER – PART NO. EC-937-2016-5-GBR**

- 1 Remove fairing.
- 2 Remove 3 existing bolts from the water pump cover, shown as position Bolt 1, 2 & 3.
- 3 Place the secondary water pump cover over the stock cover.
- 4 Assemble 3 replacement bolts loosely in the correct position as shown.
- 5 Tighten bolts to a Torque of 10Nm as per Manufacturer's recommendations.  
DO NOT OVERTIGHTEN.
- 6 Re-fit fairing.

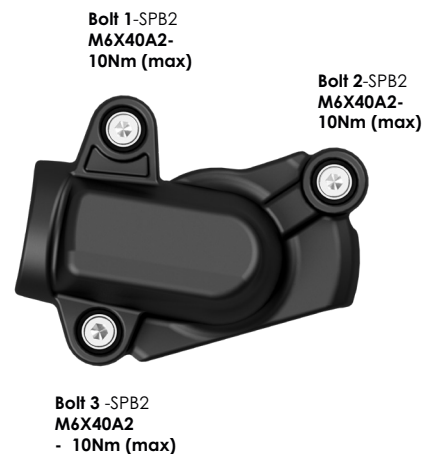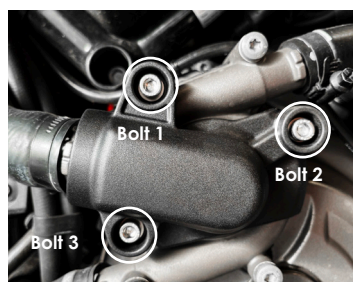

**Engine Cover Set: EC-937-2016-SET-GBR** EC-937-2016-1-GBR, EC-937-2016-2-GBR, EC-937-2016-4-GBR, EC-937-2016-5-GBR